
72mm **72mm**

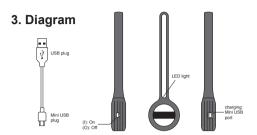

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC The select interest and only of the selection of the sele following measures:

- Journal measures:

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to onerate the equipment

Loop Speaker





Operation Manual

Contents:

- 1. Instructions
 - 1.1 Charging the speaker
 - 1.2 Bluetooth Connectivity
 - 1.3 LED light codes
- 2. Specifications
- 3. Diagram

1. Instructions

1.1 Charging the speaker

Connect the included USB cable to a computer USB port or USB charger, and to the speaker mini-USB port.

When charging, the LED will illuminate in Red. When battery is fully powered, the LED will turn off.

1. 2 Setting up Bluetooth Connectivity

(before setting up, make sure the speaker is turned on, fully charged, and not already connected to another device)

TO PAIR TO AN ANDROID PHONE

- 1. Open Settings
- 2. Open Wireless and Network
- 3. Open Bluetooth Settings
- 4. Turn Bluetooth on (if it is off) 5. Select Search for Devices
- 6. Select TOUCHPOINT
- 7. Touch Connect
- TO PAIR TO AN IPHONE OR IPAD 1. Open Settings
- 2. Turn Bluetooth on (if it is off) 3. Select TOUCHPOINT found under My Devices
- 4. Once paired: it will say Connected next to the device name

TO PAIR TO A MAC OS COMPUTER 1. Open System Preferences

- 2. Open Bluetooth
- 3. Click the + button to add a Bluetooth
- device
- 4. Select TOUCHPOINT
- 5. Click Continue the computer will pair with the device. If asked, input the passcode 0000

TO PAIR TO A WINDOWS OS COMPUTER

- 1. Open Devices and printers
- 2. Click Add a device 3. Select UGO or Bluetooth headset
- 4. Click Next
- 5. Input Pass code 0000 if necessary

1.3 LED Light:

Off / Discharged	No light
On / in pairing mode	Blinking blue light
On / connected to device	Blue light (no blinking)

2. Specifications

Output

Bluetooth version Compatible with V1.1 through v2.1

Frequency Max sound level (dB) 100Hz - 20KHz >85db or ≥ 90±2db

1.5hrs Charging time

Play time at full volume continuously approx. 2hrs

THD (Distortion level) < 0.5% DC5V DC input

72mm